

## VEM SPIKE & SHOE



### 1. Size

 
- Set: 41 x 42 (w x h)mm
- Spike: 41 x 37 (w x h) mm
- Shoe: 40 x 18 (w x h) mm
- Fixing screw: M5

### 2. Recommending max. load / each

- 10Kg ( 22 lb )

### 3. Proper use of VEM Spike & Shoe

- Place the spikes always under the flat spots of the equipment.
- The floor should be horizontal for best performance.

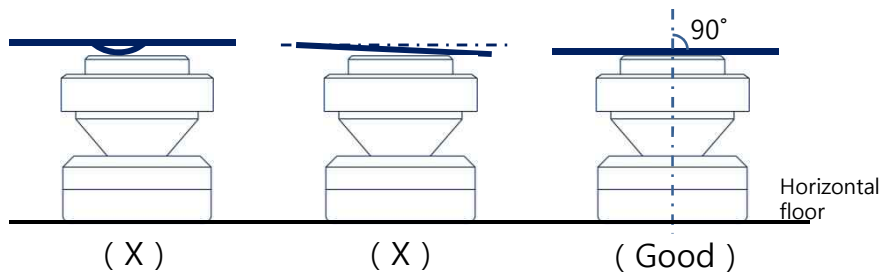

Nasotec Corporation  
96, Hau 3-gil, Paju-si,  
Gyeonggi-do, 10909 Korea  
+82 (0)31-944-1730  
[nasotec@nasotec.com](mailto:nasotec@nasotec.com)  
[www.nasotec.com](http://www.nasotec.com)  
[www.highendcity.com](http://www.highendcity.com)

## VEM SPIKE & SHOE



### 1. Size

 
- Set: 41 x 42 (w x h)mm
- Spike: 41 x 37 (w x h) mm
- Shoe: 40 x 18 (w x h) mm
- Fixing screw: M5

### 2. Recommending max. load / each

- 10Kg ( 22 lb )

### 3. Proper use of VEM Spike & Shoe

- Place the spikes always under the flat spots of the equipment.
- The floor should be horizontal for best performance.

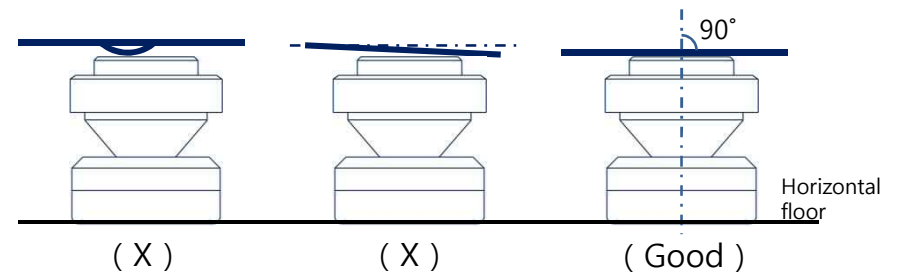

Nasotec Corporation  
96, Hau 3-gil, Paju-si,  
Gyeonggi-do, 10909 Korea  
+82 (0)31-944-1730  
[nasotec@nasotec.com](mailto:nasotec@nasotec.com)  
[www.nasotec.com](http://www.nasotec.com)  
[www.highendcity.com](http://www.highendcity.com)